


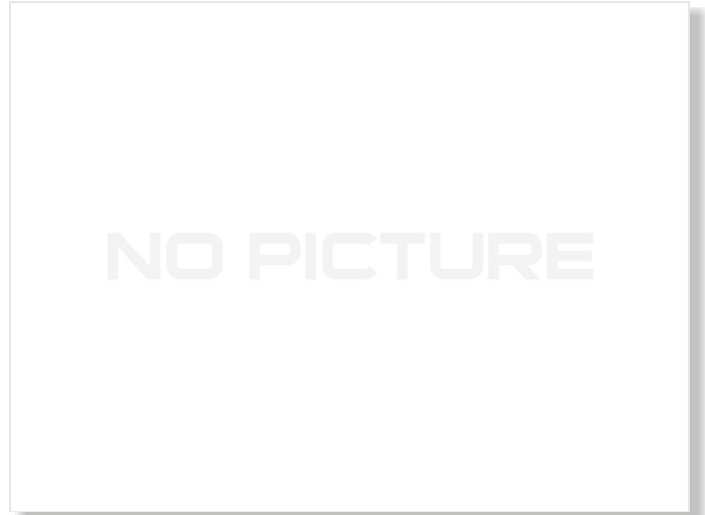

SUPPLEMENTARY MANUAL
for SH-H01

REMOVE THE SEAT.



**REMOVE THE FRAME COVERS
BELOW FUEL TANK.
LIFT UP OR REMOVE THE
FUEL TANK.
REMOVE THE AIR FILTER INTAKE
ASSEMBLY AT LEFT SIDE.**



**ROUTE THE GPX CABLE THROUGH
THE TOP OPENING OF THE
DUST BOOT.
PLUG SPEEDOHEALER CONNECTORS
IN-LINE WITH THE VEHICLE SPEED
SENSOR (VSS) CONNECTORS.**
(TRANSPARENT, 3-POLE CONNECTORS
IN DUST BOOT AT LEFT SIDE)



Honda CB900F Hornet

2002-2008



TYPICAL POSITION
FOR SPEEDOHEALER.

