Honda MSX125 / Grom [ABS]



SUPPLEMENTARY MANUAL

for SH-H11

REMOVE THE FAIRING AND THE FRAME COVER UNDER THE SEAT AT THE LEFT SIDE.



LOCATE THE SPEED SENSOR CONNECTORS IN THE DUST BOOT AND DISCONNECT IT.

(Transparent, 3-pole connector with green and pink wire and 1-pole connector with white/green wire.)

ROUTE THE SH CABLE THROUGH THE TOP OPENING OF THE DUST BOOT.



PLUG THE SPEEDOHEALER
CONNECTORS
IN-LINE WITH THE VEHICLE SPEED
SENSOR (VSS) CONNECTORS.



Honda MSX125 / Grom [ABS]


SUPPLEMENTARY MANUAL

for SH-H11

CONNECT THE SH POWER LEAD
(RED WIRE) IN-LINE WITH THE
1-POLE PLUGS OF THE BLACK WIRE
OF THE REAR BRAKE LIGHT SWITCH.



WRAP THE WIRES AND CABLES WITH BLACK TAPE NEATLY.

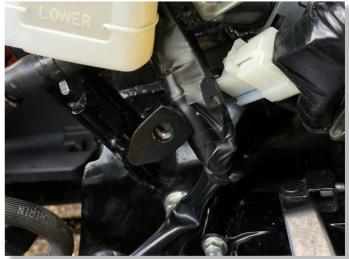

RECOMMENDED POSITION FOR THE SPEEDOHEALER.

SECURE THE UNIT PROPERLY.

