

# Honda CRF1100 Africa Twin DCT 2020-



## SUPPLEMENTARY MANUAL

for SH-V4 + SH-U01


SECURE THE BIKE ON A STAND.



REMOVE THE FAIRINGS ON THE LEFT  
SIDE.



LOCATE THE 12-POLE DASHBOARD  
CONNECTOR.

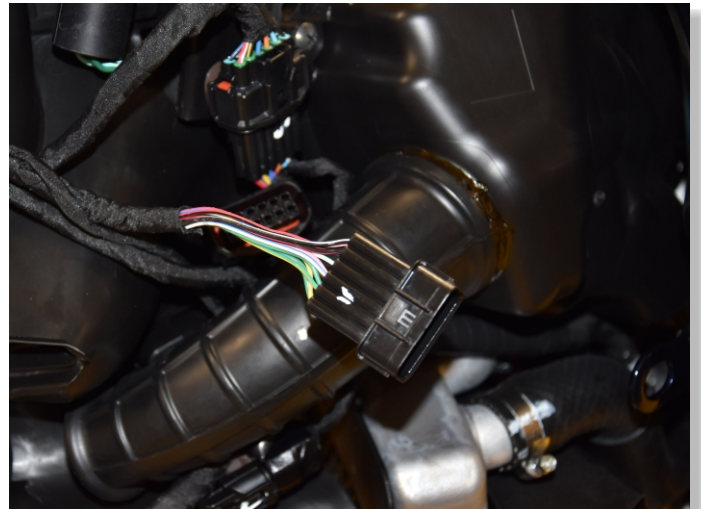

# Honda CRF1100 Africa Twin DCT

2020-



## SUPPLEMENTARY MANUAL

for SH-V4 + SH-U01

CUT THE PINK WIRE ABOUT 4CM (1.5") AWAY FROM THE CONNECTOR.

SPLICE THE SPEEDOHEALER WHITE WIRE TO THE PINK WIRE END, WHICH GOES TO THE DASHBOARD CONNECTOR.

SPLICE THE SPEEDOHEALER GREEN WIRE TO THE PINK WIRE END, WHICH IS AT THE WIRING HARNESS SIDE.

SPLICE THE SPEEDOHEALER BLACK WIRE TO ONE OF THE SOLID GREEN GROUND WIRE.

SPLICE THE SPEEDOHEALER RED WIRE TO THE BLACK/RED WIRE.

RECOMMENDED POSITION FOR SPEEDOHEALER.

