

Yamaha MT-07 [ABS] 2014-




SUPPLEMENTARY MANUAL

for SH-V4 + SH-U01

REMOVE THE SEATS, THE FAIRING
AROUND THE FUEL TANK AND THE
PLASTIC COVER ON THE RIGHT SIDE.




LOCATE THE ECU CONNECTOR
BELOW THE FUEL TANK.

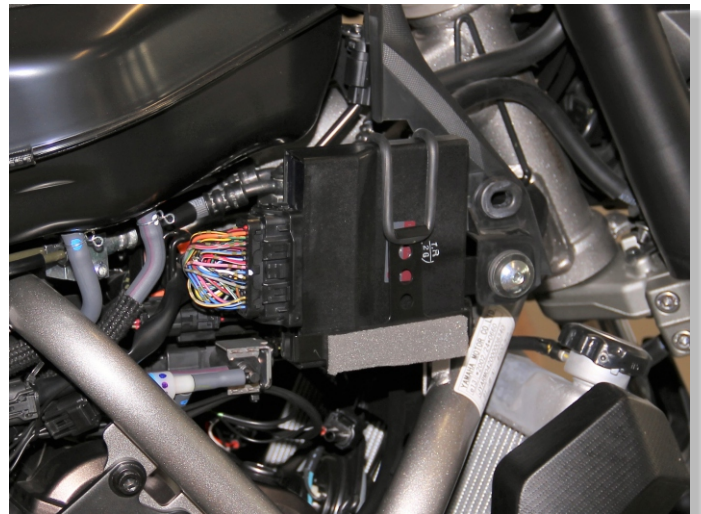

CUT THE WHITE/YELLOW (SPEED
SIGNAL) WIRE AT THE ECU
CONNECTOR.

SPLICE THE GREEN SH WIRE TO
THE WHITE/YELLOW WIRE END,
WHICH IS AT THE ECU BOX SIDE.

SPLICE THE WHITE SH WIRE TO THE
WHITE/YELLOW WIRE END, WHICH IS
AT THE WIRING HARNESS SIDE.

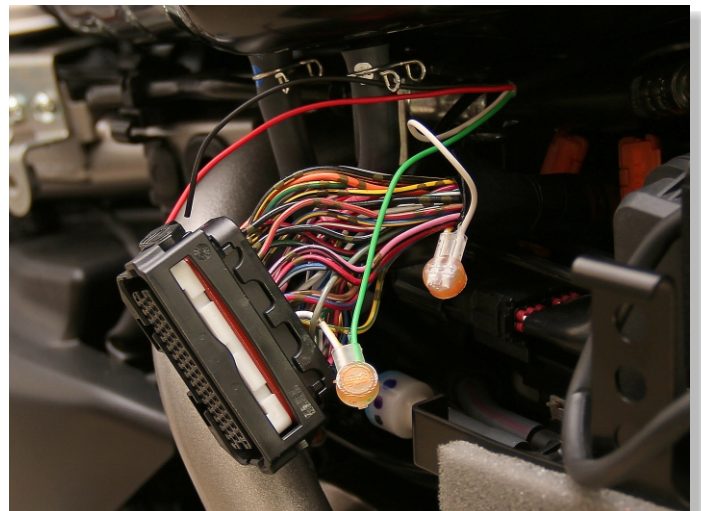




SUPPLEMENTARY MANUAL

for SH-V4 + SH-U01

SPLICE THE RED SH WIRE TO THE
RED/WHITE ECU WIRE.

SPLICE THE BLACK SH WIRE TO THE
BLACK ECU WIRE.

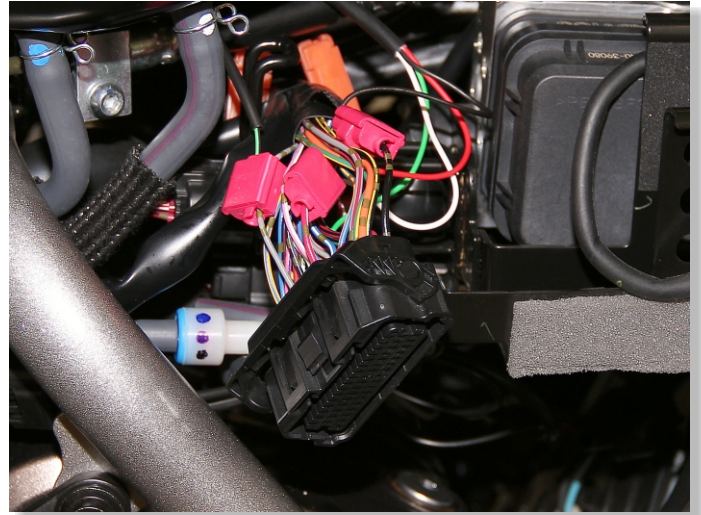

RECOMMENDED POSITION
FOR THE SPEEDOHEALER.

SECURE THE UNIT PROPERLY.

